

Typical Wiring Diagram - ELAHO SMART SPACE CONTROLLER (ESSC)
Set as Occupancy Transmitter for Time-Clock override of local occupancy control

38924 Queens Way Unit #1 Squamish, British Columbia Canada V8B 0K8 Phone: 1 (778) 733-0111 Toll Free: 1 (888) 324-6359 Fax: 1 (604) 815-0078



ALL DIMENSIONS ARE IN MILLIMETERS UNLESS OTHERWISE SPECIFIED- 8DC-9995 Rev 3